PhaseGreen

App User Manual

SOLARMAN Business APP

Version：V1.1

PHASEGREEN TECHNOLOGY INC

Trademarks and Permissions

PhaseGreen and other PhaseGreen trademarks are trademarks of PHASEGREEN TECHNOLOGY INC.
All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

The purchased products, services and features are stipulated by the contract made between PhaseGreen and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope. Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

PHASEGREEN TECHNOLOGY INC
Address: 3401 El Camino Real, Palo Alto, CA 94306, USA
EIN#: 88-3185469
Website: www.phasegreen.com

Version History

Changes between document issues are cumulative. The latest document issue contains all the changes made in earlier issues.

Version 1.0 (2022-01-20)
Version 1.1 (2023-01-22)

CONTENTS

1.Download SOLARMAN Business APP

1.1 Scan QR code below to download (Both for Android &iOS）.

1.2 Go to APP Store or Google Play and search 'SOLARMAN Business'.

2.Register a Business

After download SOLARMAN Business APP， click register to create a business

3.Create a New Plant

3.1 Log in to SOLARMAN Business. (Super admin has full permissions. If other account wish to create a plant, please check its permission first.)

3.2 Method 1: Go to 【Business】—【O&M】—【Plant】 and click 【+】 in the upper right corner.

3.3 Users can enter basic info, system info, yield info, owner info here.
Plant name, location, region, address, coordinate, capacity, currency are
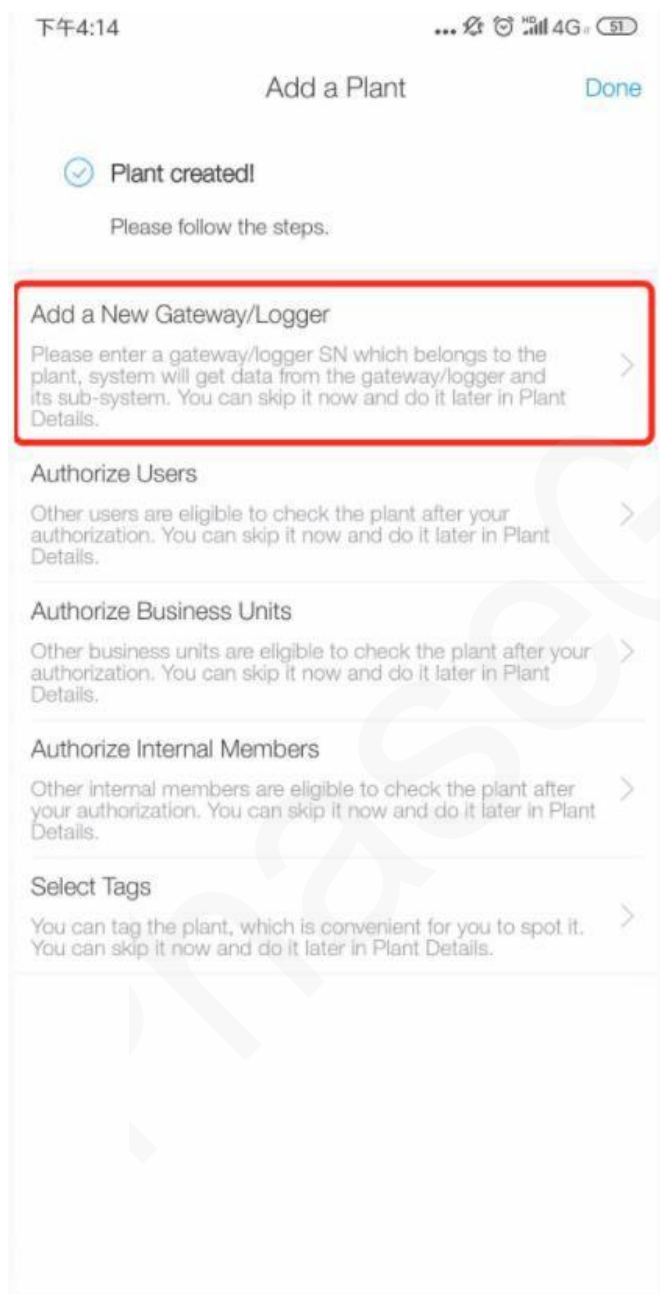required fields.

Notice：

1. After the plant location is confirmed, system will confirm the region, coordinate, currency and time zone automatically.

2. System type includes All on Grid, Self-consumption, Energy Storage System. Different system type has different plant view. Please select the system type according to actual situation.

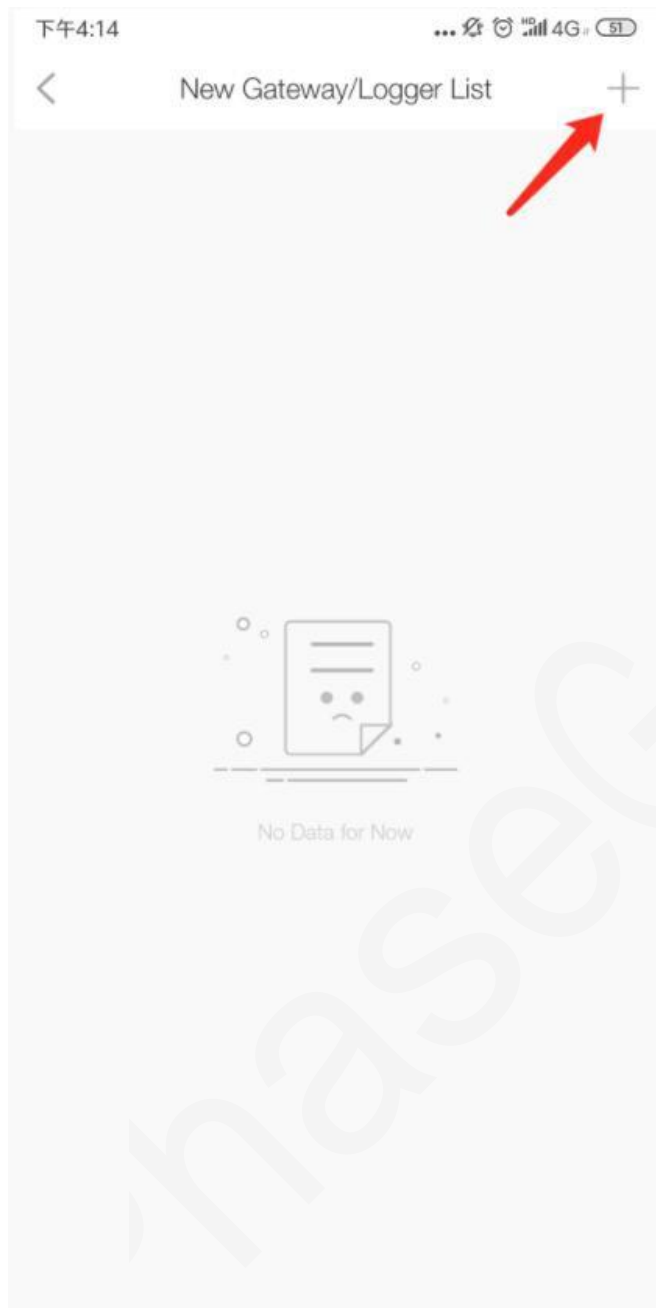3. Capacity is a required field. Please enter the accurate capacity.

4. Add a Gateway/Logger

Please enter gateway/logger SN belongs to the plant. System will count data according to gateway/logger and its sub-device.
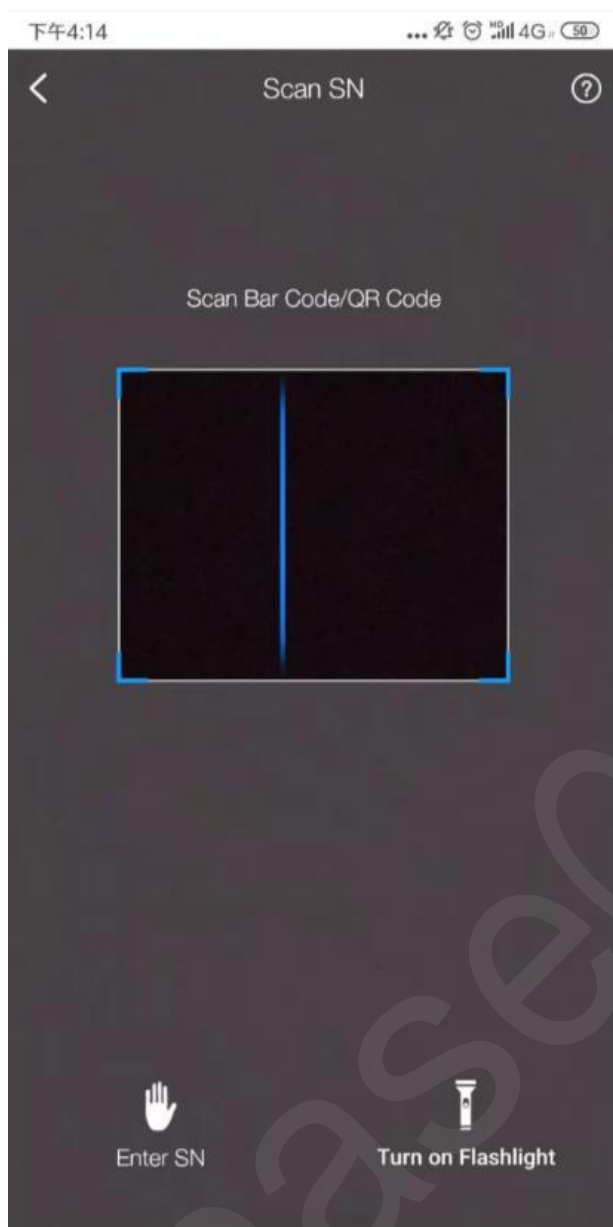
4.1 After entering the plant info, click save. Then go to 【Add a New Gateway/Logger】

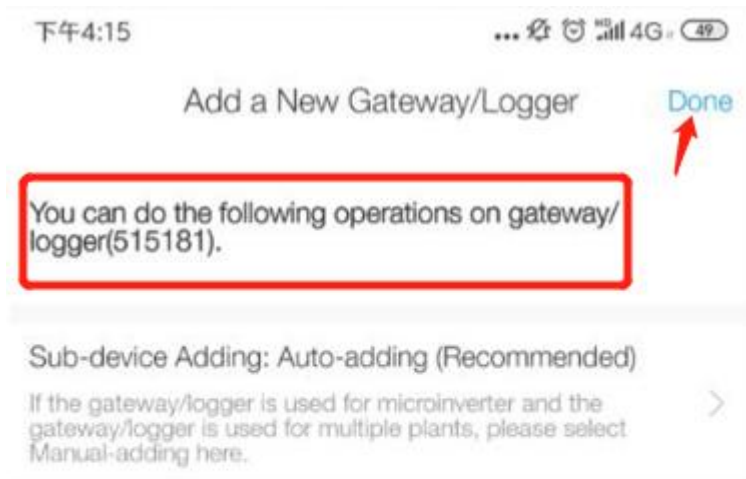4.2 Go to 【New Gateway/Logger List】 and click【+】in the upper-right corner.

4.3 Scan bar code/QR code of gateway/logger here.

Notice：

● If you cannot find gateway/logger SN, please click【?】in the upper-right corner.

● If there is no bar code/QR code or the bar code/QR code is broken, please go to Enter SN】 in the lower-left corner.

● If it is in low-light conditions, please click 【Turn on Flashlight】.

4.4 After scanning the gateway/logger SN, click 【Done】 to finish.

5. Plant Created

After adding a gateway/logger and authorizing a plant, back to the page below.
Click 【Done】 in the upper-right corner. System will go to Plant Details
automatically. If the gateway and its sub-device are networked, users can check
the data around 10 mins.